


# How to measure air flow ?

## Perfect manual

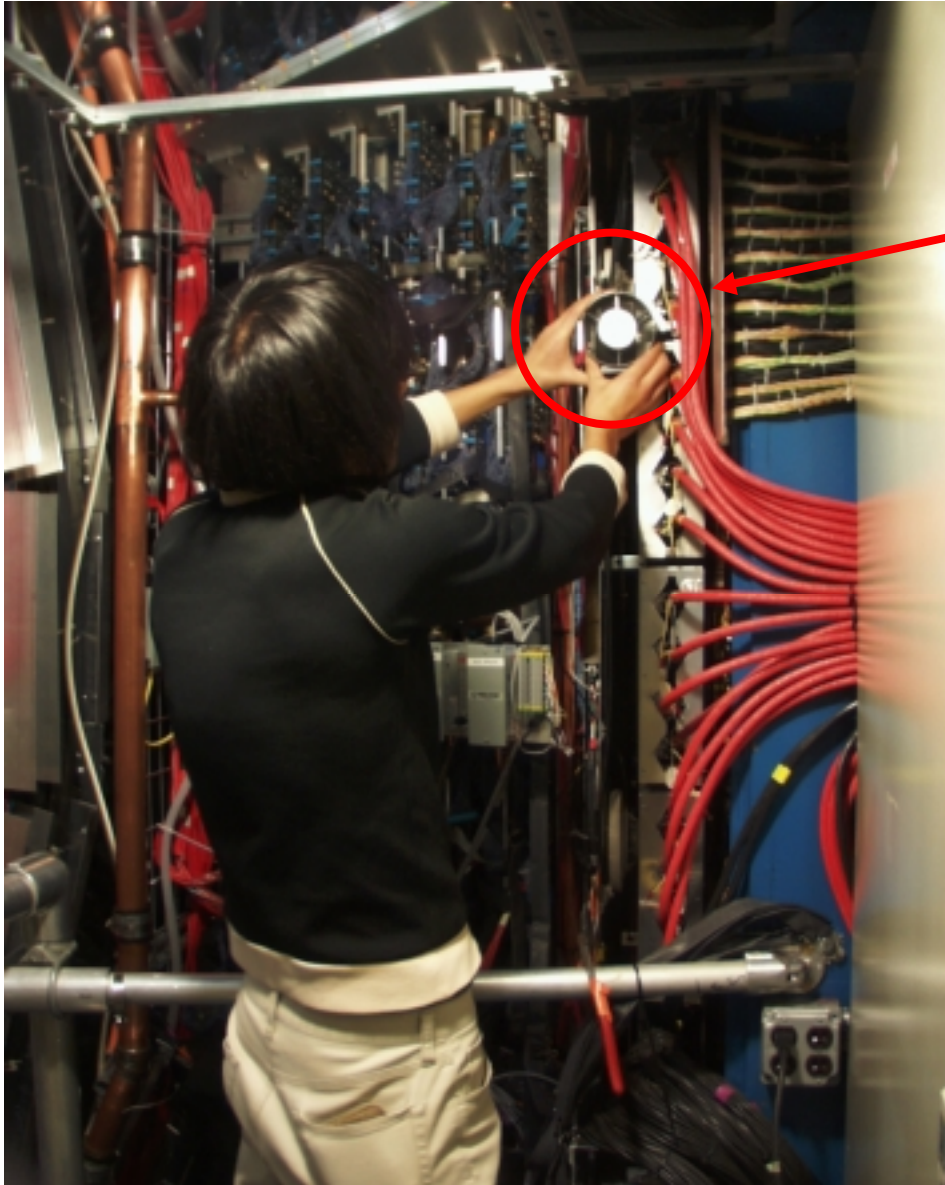

- Take **wind velocity meter** off the shelf (above the copy machine) at 1008.
- Measure air flow at each measured point marked by yellow tape on south side.
  - If you have a time, measure air flow many times to reduce statistical error.